

## FENDER FLARE INSTALLATION INSTRUCTION

### 07-11 CHEVY SILVERADO STD, LONG & SHORT BED

#### Parts

Qty (1) Fender Flare Left Front (LF)  
 Qty (1) Fender Flare Left Rear (LR)  
 Qty (1) Fender Flare Right Front (RF)  
 Qty (1) Fender Flare Right Rear (RR)


Qty (1) Adhesive  
 Qty (8) Self Tapping Screws

#### Step 1. Pre-Installation



Prefit both driver side and passenger side fender flares to the vehicle before painting or installation. You may remove any moldings, strips or existing flares from the vehicle for fitting or installation. You can cut the fender flare to fit any body side molding.

#### Step 2. Painting (optional)

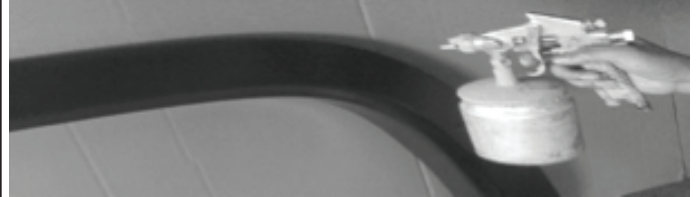

Professional paint or body shop recommended to paint flares. Follow all the paint manufacture specifications to paint the flares. Clean fender flare surfaces with clean water and a mild detergent before painting, do not use lacquer thinner or any solvent based products.

#### Step 3. Cleaning




Wash and wipe dry the areas of contact on the vehicle body. Clean the surface and inside edge of the fender flare where the rubber seal is to be attached.

#### Step 4. Peel Red Liner From Adhesive




Peel about 2" of the red liner away from one end of the double sided adhesive tape. Pulling the red liner free attach the flare to the fender with firm and even pressure to ensure adhesion.

#### Step 5. Installation (Left Rear Flare Shown)

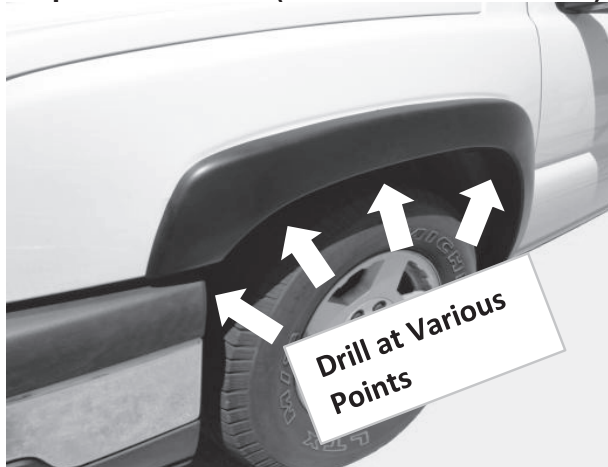

Using a 1/8" diameter drill bit or the provided self tapping screws, attach the flare at the various points.

#### Step 6. Installation (Left Rear Flare Shown)

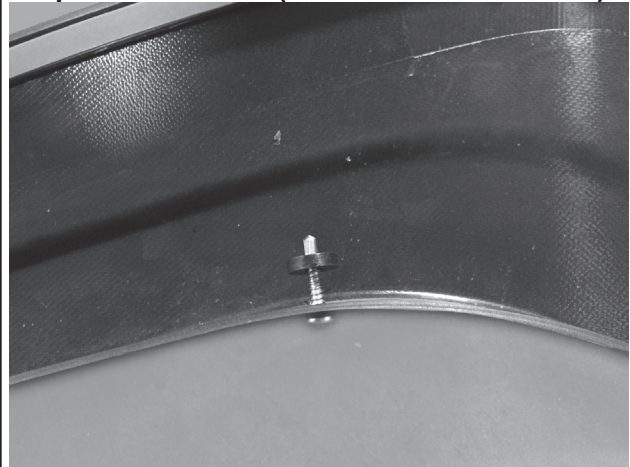

If the factory screws interfere with the fitting without using the plastic washers, you may remove the factory screws and attach the fender without using the plastic washers. Do not wash the vehicle for 24 hours.